







10 MACHINE COMPONENTS

10.1 - List of spare parts

PART NUMBER	DESCRIPTION
1	Base
2	Arm locking lever
3	Bush
4	Rear protection
5	Roller support
6	Roller
7	Crucible
8	Electropump
9	Pivot
10	Bearing 51105
11	Bush
12	Hinge Pivot
13	Bearing 32007 X
14	Ring NILOS 32007 XAV
15	Excentric bush
16	Bearing 32007 X
17	Ring Nilos 32007 XAV
18	Ring nut GUK 35
19	Left jaw support
20	Right jaw support
22	Right countervice jaw
23	Left countervicece jaw
24	Vice jaw
25	Vice
26	
27	
28	
29	Leadnut
30	Spring
31	Vice gib
32	Vice support
33	Pin
34	Bush
35	Vice level
36	Handle
37	Pin
38	
39	
40	
41	
42	
43	Bar stop rod
44	Bar stop pointer
45	Bar stop body
46	Bracket
47	spring bush
48	Cylinder fork
49	Pin

PART NUMBER	DESCRIPTION
50	Handle
51	Plate
52	Microswitch plate
53	Microswitch
54	Plate
55	Microswitch
56	Rotation palte
57	Base
58	Right plate
59	Left plate
60	Splash protection
61	Electric box
62	Vice cylinder
63	Vice handwheel
64	Vice screw
65	Sawframe cylinder
66	Sawframe spring
70	Sawframe
72	Blade tension plate
73	Blade tension pin
74	Microswitch
75	Microswitch plate
76	
77	Pin
78	spring washer
79	Blade tension handwheel
80	Lever
81	Hand with mmicroswitch
82	Ring NILOS 32006 XAV
83	
84	Bearing 32006 X
85	Return flywheel
86	Ring nut GUK 30
87	Screw M 12
88	Washer
89	Motor flywheel
90	Bearing 6208 2RS
91	Wrench
92	Wrench
93	Motor shaft
94	Reduction unit
95	Electric motor
99	Flexible pipe
100	Coolant distributor
101	Connection
102	coolant tap
103	Connection
104	Microswitch
105	Knob



PART NUMBER	DESCRIPTION
106	Cover
107	knob
108	Bracket
109	Connection
110	Blade-guide adjustable rod
111	Short eccentric pin
112	Long eccentric pin
113	Bearing 608 2RS
114	Blade guide protection
115	Fixed blade-guide pad
116	Mobile blade-guide pad
117	Mobile blade-guide block
118	Blade protection
119	Fixed blade-guide Block
120	Fixed rod
121	
126	Cylinder support
132	Foot control switch -
133	Spray gun