



C1	HYDRAULIC BOX
C2	UPPER COVER
C3	FILTER COVER
C4	REFUEL
C5	LEAKING OIL BOLT
C6	OIL DISPLAY
C7	OIL DISPLAY SCREW
C8	JAKI
C10	VALVE BLOCK
C11	NEGATIVE VALVE
C12	LOW-PRESSURE CONTROL VALVE A
C13	CONNECT PLUG
C14	OIL PRESSURE GAUGE
C15	MOTOR
C16	FAN
C17	FAN COVER
C21	ADJUSTMENT BOLTS
C22	NEGATIVE VALVE
C23	ARRANGE PIPELINE
C24	HYDRAULIC PUMP
C25	FILTER NET
C26	NEGATIVE VALVE
C27	LOW-PRESSURE CONTROL VALVE B
C28	CONNECTOR HAND
C34	PLATE
C35	FUSE BOX
C36	PCB PLATE
C37	FUSE COVER
C38	Hydraulic Unit

WISENT

LZ530HA

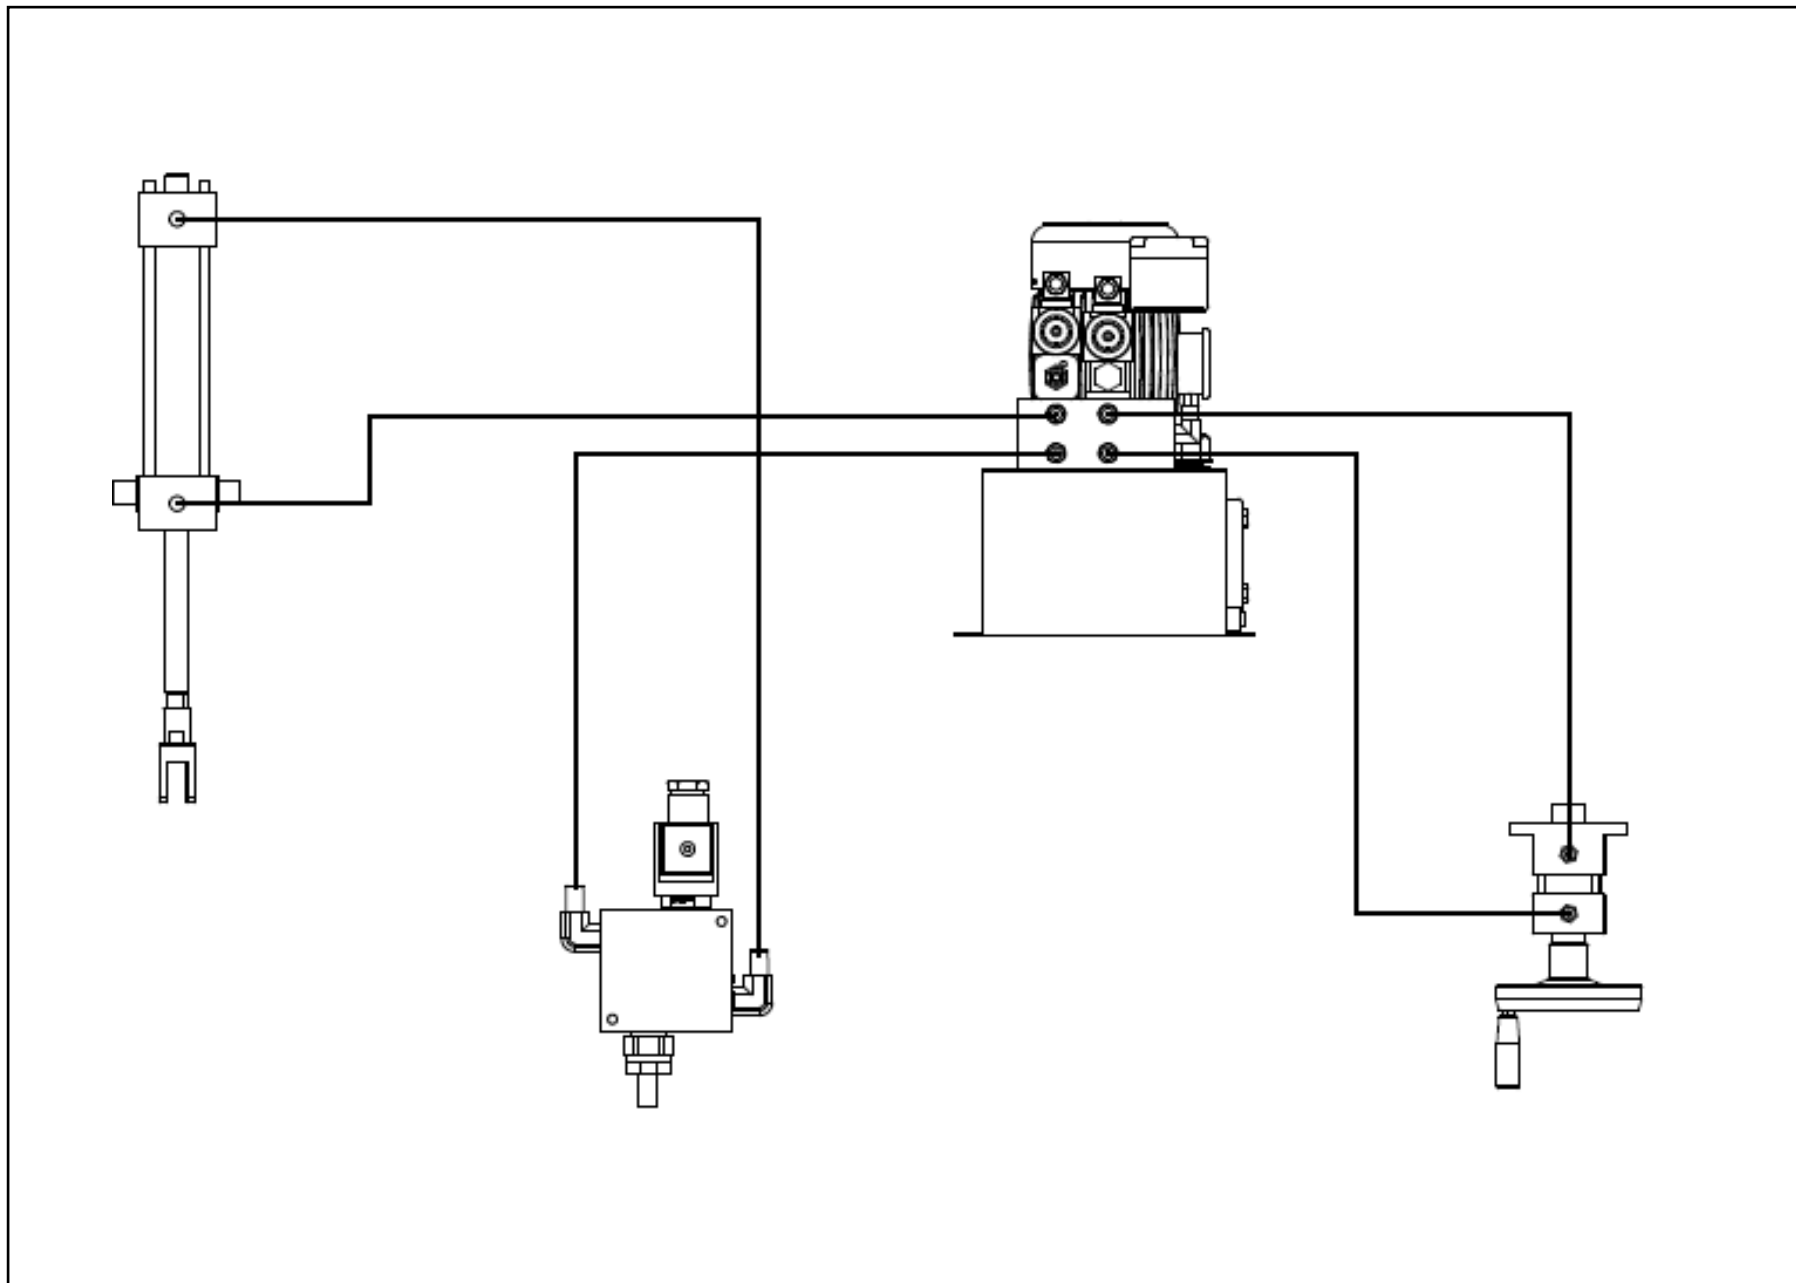

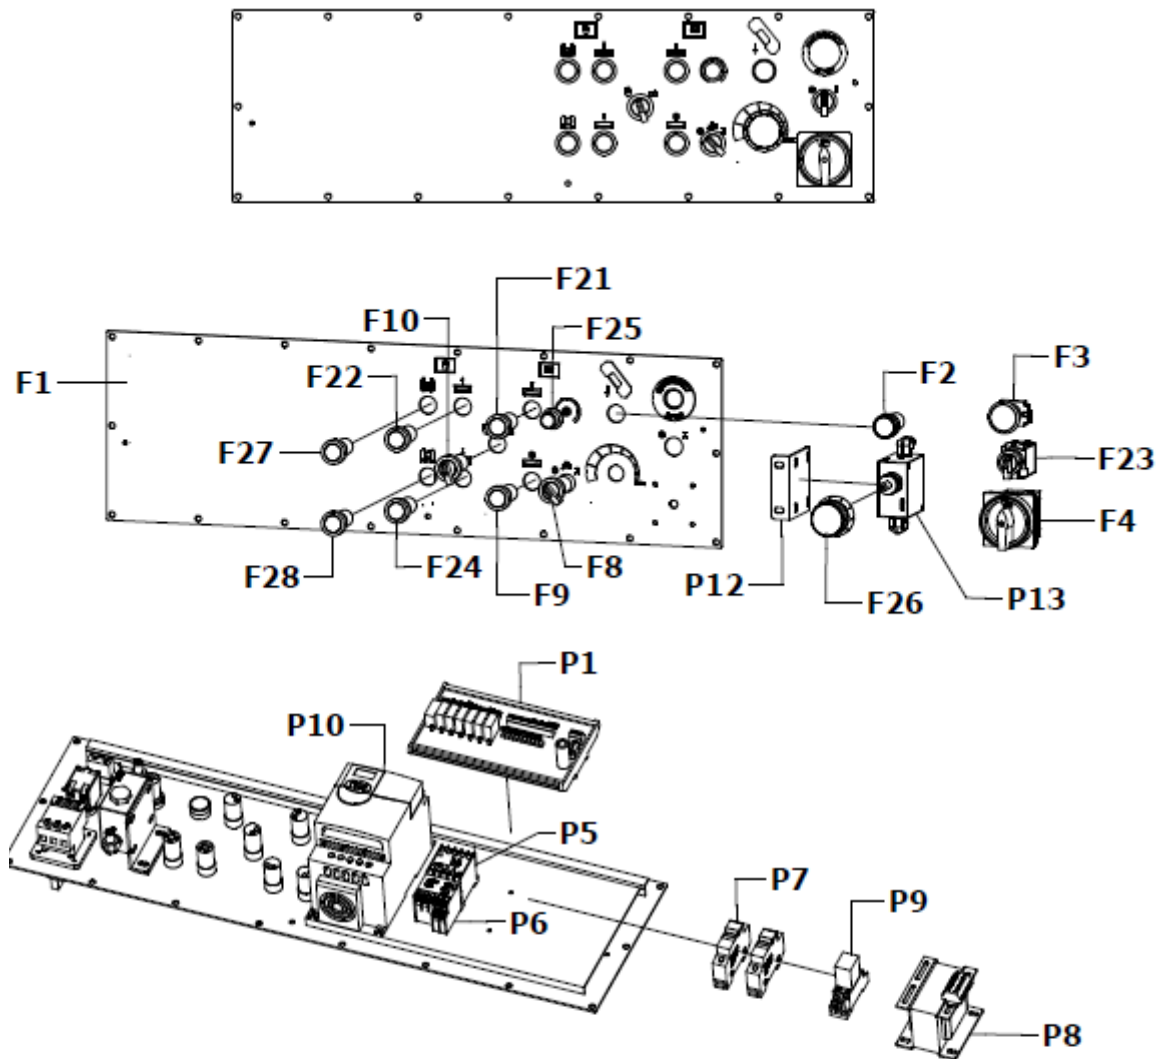

NO	PARTS NAME	NO	PARTS NAME
F1	FACE PLATE	F25	KNOB
F2	DOWN SWIVCH	F26	KNOB
F3	EMERGENCY STOP	P1	PCB PLATE
F4	CAM SWITCH	P5	CONTACT
F8	PUMP SWITCH	P6	OVER RELAY
F9	OFF SWITCH	P7	FUSE
F10	H/A SWITCH	P8	TRANSFORMER
F21	ON SWITCH	P9	RELAY
F22	UP SWITCH	P10	INVERTER
F23	POWER SWITCH	P12	PLATE
F24	DOWN SWITCH	P13	HYDR CONTROL VALVE